


# Purge Control Solenoid Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

## 5. Purge Control Solenoid Valve

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.
- 3) Remove the air intake chamber. <Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
- 4) Disconnect the connector and hoses of purge control solenoid valve, and then remove the purge control solenoid valve.

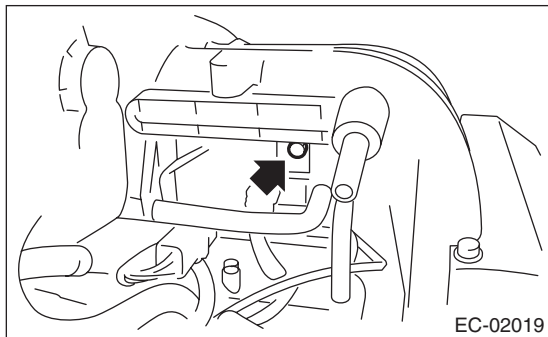


### B: INSTALLATION

Install in the reverse order of removal.


#### **Tightening torque:**

**19 N·m (1.9 kgf-m, 14.0 ft-lb)**

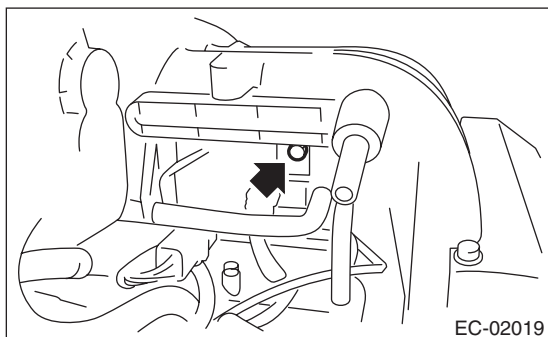

#### **NOTE:**

Connect the evaporation hose as shown in the figure.

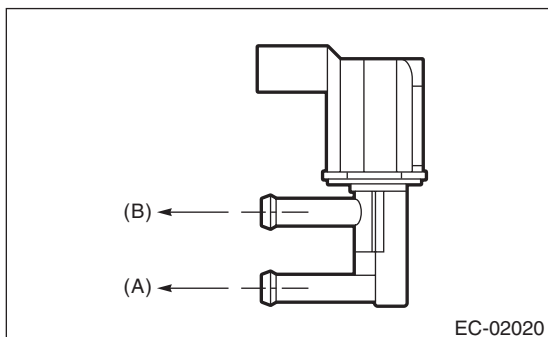

- (A) To fuel pipe (evaporation line)  
(B) To intake manifold

### C: INSPECTION

Make sure the hoses are not cracked or loose.